

INSTRUCTION MANUAL FOR ACTIVATING THE SMART TACHOGRAPH READOUT FUNCTION

For devices: TACHOREADER® COMBO PLUS and TACHOREADER® BASIC

The following instruction manual describes how the user can manually update the devices and activate the readout functions of the smart tachographs and all data from the second-generation driver cards.

It is possible to update and activate new functions for devices:

- 1) TACHOREADER® COMBO PLUS, the serial number of which ends with the letter "A":



- 2) TACHOREADER® BASIC - all devices



Cost of updating and activating new functions:

- The net price of updating and activation of new functions for devices is 75 euro.
- Instruction manual for updating and unlocking new functions


1) Device software update:

- For TACHOREADER® COMBO PLUS (with the letter “A” at the end of the serial number), download and run the installer from the website: [<LINK>](#)



To perform the update correctly, follow the steps in the installer.


- For TACHOREADER® BASIC, download and run the installer from the website: [<LINK>](#)

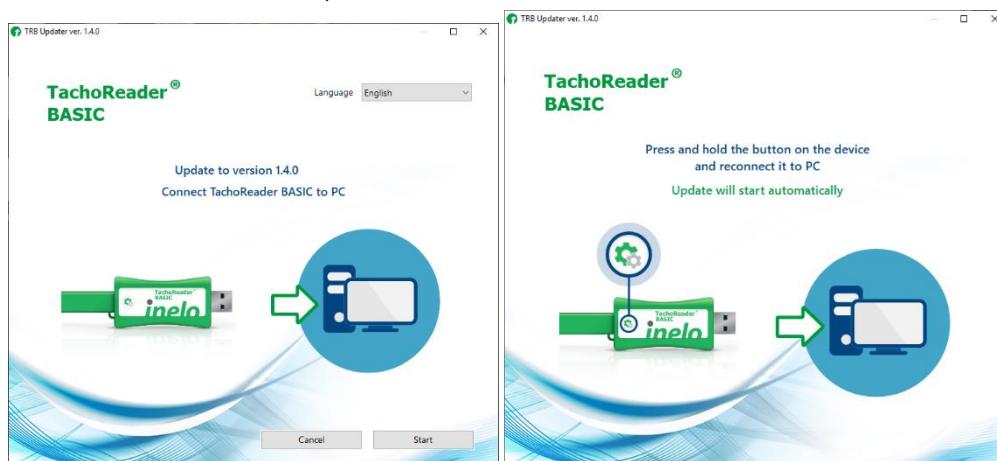


To perform the update correctly, follow the steps in the installer

2) Obtaining the device identifier.

After connecting the device to the computer, it will appear as a removable disk called “PNSTACHO”. Enter this disk and run the file „TachoReaderConfigurator.exe”.

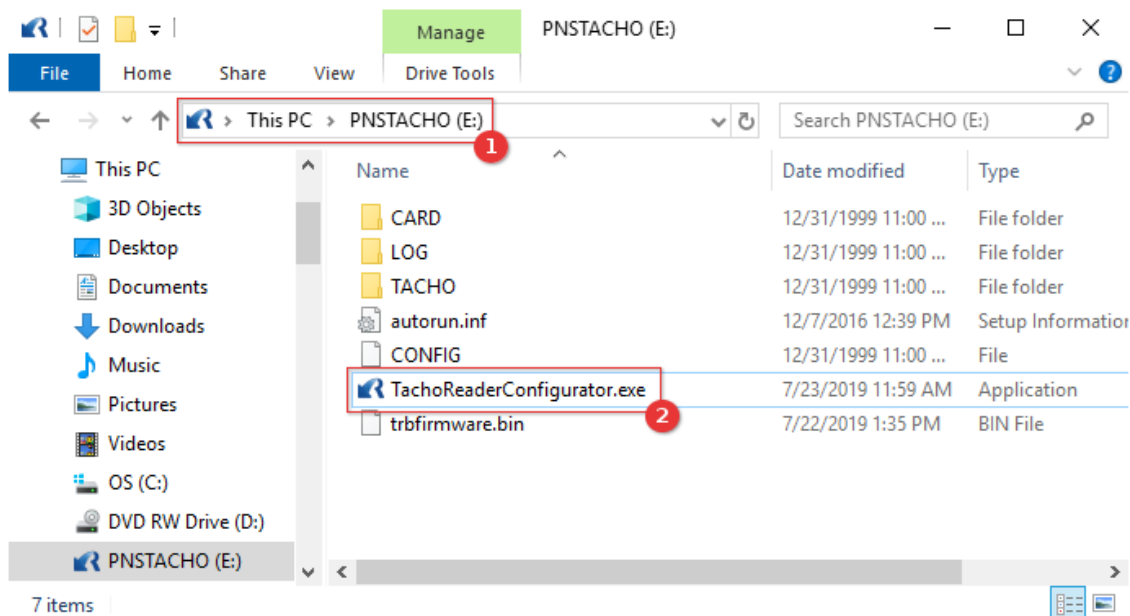

After starting the program, we will get the ID code after double clicking on the exclamation mark

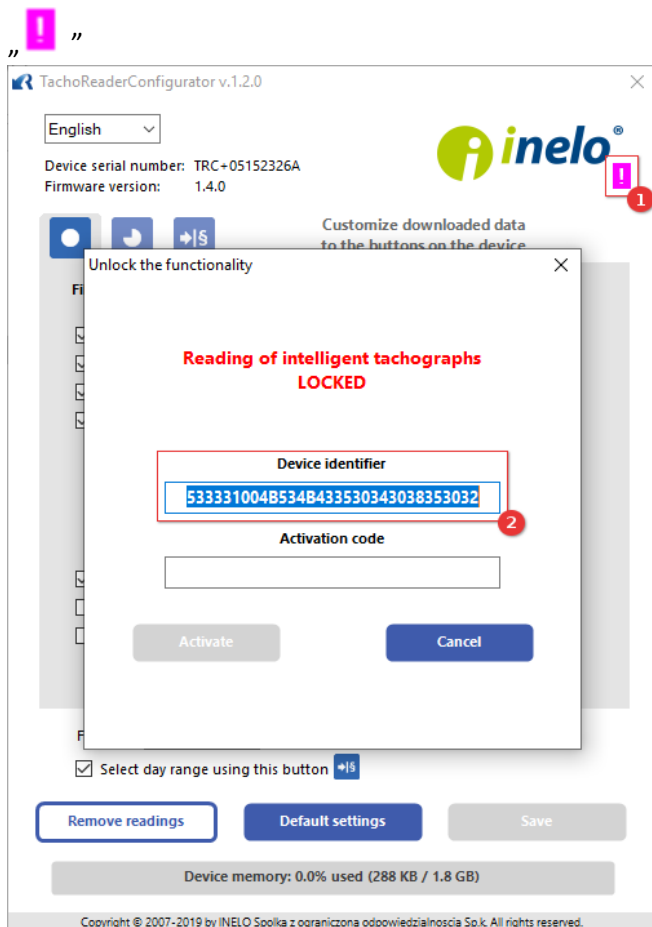

3) Obtaining a code to activate new functions

The device identifier obtained in step 2 and the contact details must be sent to the customer service office to generate an unlock code for the new features.


Customer Service Office:


e-mail: export@inelo.pl

The activation code will be sent to the indicated e-mail address depending on the date of purchase of the device - after verification and payment (if the device is not subject to free activation of new functions).


4) Enter the activation code.

The activation code obtained in step 3 must be entered in the device configurator. After connecting the device to the computer, it will appear as a removable disk called "PNSTACHO". Enter this disk and run the file „TachoReaderConfigurator.exe”

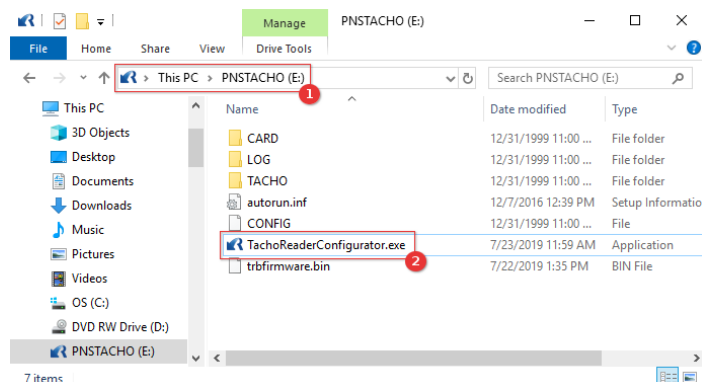

After starting the program, double-click the visible exclamation mark „”, enter the activation

code and click on the "Activate functions" button:

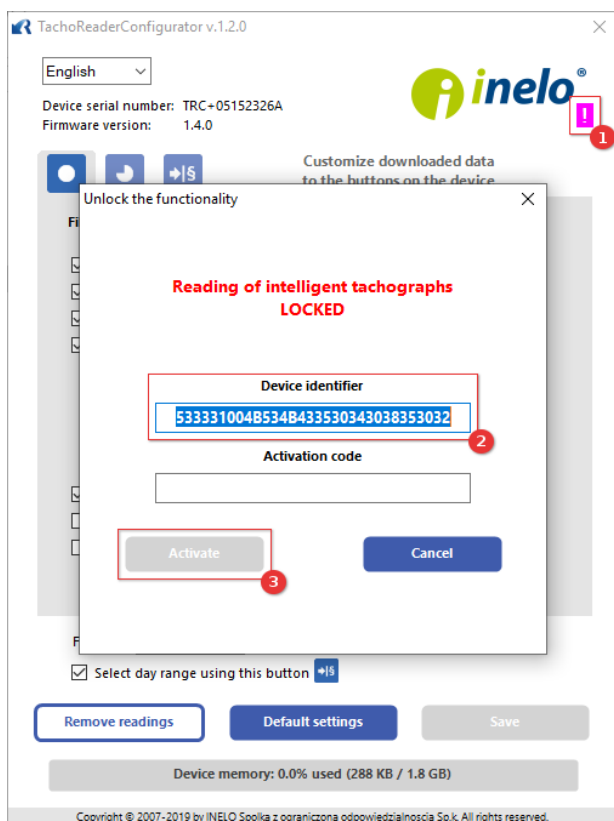

- 5) **It's ready** 😊 After reconnecting the device, the exclamation mark will no longer be visible, which means that all functions of the smart tachograph have been activated.

In case of technical problems during the update, please contact INELO Service Department (Open 7:00 a.m. - 5:00 p.m.; Mon-Fri):

e-mail: support@inelo.pl

There is also a possibility of updating the equipment by our specialists - in order to do so, please fill in the following form https://inelo.pl/wp-content/uploads/2019/09/formularz-serwisowy_1_5_en.pdf and send the device together with the completed form to the address:

Inelo Polska Spółka z ograniczoną odpowiedzialnością
ul. Partyzantów 71,
43-300 Bielsko-Biała, Poland